
tuforte finish

finishing mortar



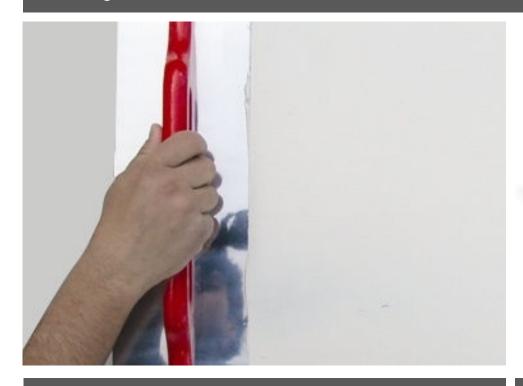

- Excellent Workability
- Extra Fine Finish

use

Extra fine finishing mortar indicated for the complete finish of the plasterboard, indoors.

surfaces

• Plasterboard







tuforte finish

finishing mortar

recommendations

In the preparation of the paste use clean water.

Do not apply Tuforte Finish outdoors or on floors.

Do not apply Tuforte Finish in too humid places.

The Tuforte Finish when applied as a plasterboard finish only admits film coatings such as paint or wallpaper.

If you want to coat the plasterboard with ceramic pieces, they should be glued directly onto the board, in this case do not finish with Tuforte Finish.

Permissible coatings: paint, decorative paper.

composition and characteristics

Composition:

Mineral fillers, redispersible resins and specific additives.

Characteristics:

Time of use the mixture: 24 hours.

Drying time: 2-4 hours

Application temperature: +5 ° C to

+30 °C.

NOTE: Results obtained in laboratory conditions (20 °C). These results may vary depending on application conditions (temperature and relative humidity).

colour

White

consumption

 $0,25 - 0,40 \text{ Kg/m}^2$.

available in

Bag with 15 kg.

storage

1 year from date of manufacture in original sealed package.





tuforte finish

support preparation

The surface must be clean, dry, dust or any other material that impair the normal adhesion. Check that the screw heads are properly recessed. The supports must be flat.



aplicação

Pour the powder progressively into about 10 liters of clean water and let stand for 2 to 3 minutes.

Mix mechanically with low speed mixer (500 rpm) to obtain a mass of plastic consistency.

If necessary adjust the consistency of the paste by adding a little more powder or water. The consistency depends on the work to be done, ie harder paste for small adjustments or more fluid / creamy for finishes.



Apply one or several layers with the aid of a spatula or metal trowel.

It can be applied in several cross-layers.

The waiting time between each layer depends on: the ambient temperature, the type of carrier, and the thickness of the previous layer.



After drying, if necessary, perfect the surface with a sandpaper.

After 2 to 3 days you can coat with paint or paper.





