

# INSTALLATION METHOD

Art. 115 - 116

- 1 - Make sure that the welding surfaces are clean and free from any contaminants.
- 2 - Spot weld the inside/outside corner in order to hold in the requested position.
- 3 - Weld the perimeter of the inside/outside corner to the waterproofing membrane.
- 4 - Check the executed weld with a probing tool, this operation must be carried out only after the weld has cooled completely.

**NOTE:** *The above elements should not be used as a substitute of the original waterproofing product, they have been created for a secondary protection and reinforcement of those areas of higher risk because of transversal and horizontal traction of the waterproofing membrane.*


## 02.7 INTERNAL AND EXTERNAL CORNERS IN PVC-P

### DESCRIPTION FOR SPECIFICATIONS


Supply and install ITALPROFILI® **inside and outside corners** or similar, made of UV stabilized PVC-P.



^ ART. 115

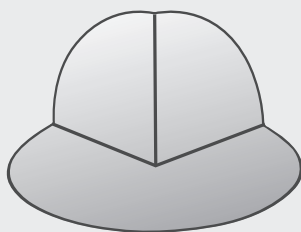

^ ART. 116

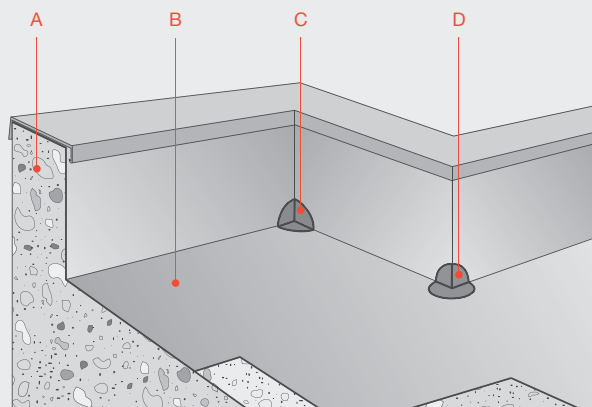

- A - Deck
- B - Bituminous membrane
- C - Internal corner
- D - External corner